

Wall Switches & Remote Controls

Controls	Brand ^P	Wall or Remote	IPI or SP†	On/Off	Fan Speed	Flame High/Low	Pilot Activation	AUX Function	Temp Readout	Thermostat Mode	Timer Mode	7-Day Programmable	Battery Strength Indicator	Automatic Battery Backup
TotalSwitch WSK-MLT	HTL, HNG, QDF	Wall	Both	●	●	●	●	● (one)	●	●				
IntelliSwitch®300 WSK300	HTL, HNG, QDF	Wall	IPI	●	‡	●	●	● (three)	●	●	●		●	●
IntelliSwitch®200 WSK200	HTL, HNG, QDF	Wall	IPI	●	●		●						●	●
IntelliSwitch®100 WSK100	HTL, HNG, QDF	Wall	IPI	●			●						●	●
EasySwitch WSK-21 & WSK-21-W	HTL HNG	Wall	Both	●										
Programmable Thermostat 811-0520	QDF	Wall	Both						●	●		●		
Thermostat 812-3760	QDF	Wall	Both						●	●				
TotalRemote RCT-MLT	HTL, HNG, QDF	Remote	Both	●	●	●			●	●	●			
SmartRemote-Battery SMART-BATT, 841-970	HTL, HNG, QDF	Remote	Both	●					●	●	●			
SmartRemote-Hardwired SMART-STAT, 841-0960	HTL, HNG, QDF	Remote	Both	●					●	●	●			
EasyRemote-Battery* RC-BATT	HTL HNG	Remote	Both	●										
Easy Remote-Hardwired RC-SMART	HTL HNG	Remote	Both	●					●					

GAS FIREPLACE CONTROLS
HEATILATOR, HEAT & GLO, AND QUADRA-FIRE



Feature Glossary

7-Day Programmable: Control room temperature settings on a weekly cycle.

Automatic Battery Backup: Senses power failure and automatically switches the unit to battery operation, keeping you and your family warm.

AUX Function: Controls assigned auxiliary functions, such as accent lighting or electric embers.

Battery Strength Indicator: A blinking indicator alerts the homeowner when new batteries are needed, and a solid-on indicator signifies that the hearth system is operating on battery power.

Fan Speed: Adjusts the speed of the fan, pushing heat into the room.

Flame High/Low: Adjusts the height of the flames, affecting ambiance and heat output.

On/Off: Turns the flames on and off.

Pilot Activation: Changes the pilot from 'as-needed' (activated only when the fireplace is turned on) to 'constant-on' (seasonal pilot remains on to improve performance during the coldest times of the year).

Temp Readout: Communicates room temperature.

Thermostat Mode: Maintains the specified room temperature by adjusting the hearth system, much like a furnace thermostat.

Timer Mode: Shuts flames off automatically at a pre-set time.

* Hardwired vs. Battery Powered

EasyRemote-Battery and SmartRemote-Battery operate fireplaces and inserts that have a battery powered transmitter and features such as standing pilots, but no fans or lights.

EasyRemote-Hardwired, SmartRemote-Hardwired and TotalRemote operate fireplaces and inserts wired for electricity, such as those with IntelliFire™ ignition, fans and lights.

† IPI = Intermittent Pilot Ignition

SP = Standing Pilot

‡ Fan speed is one of three auxiliary functions

^P HTL = Heatilator

HNG = Heat & Glo

QDF = Quadra-Fire



heatilator
The first name in fireplaces

HEAT & GLO
Where everything comes together

QUADRA-FIRE
NOTHING BURNS LIKE A QUAD

The warmth of home
at your control.



Enjoying your gas hearth system is
only a click away.

Hearth & Home controls are uniquely
designed to conveniently start your fire with
a simple, easy click.

A sleek wall switch stays in one convenient
location while a remote control goes wherever
you go. With both, you have choices. Select
the control that best meets your needs and
your hearth features.

All controls are UL listed and approved for
use with Heatilator®, Heat & Glo™ or
Quadra-Fire® fireplaces, inserts, gas logs
or stoves.

WALL CONTROLS

IntelliSwitch®300 Designed exclusively for highly
featured Heatilator, Heat & Glo and QuadraFire
fireplaces with IntelliFire™, our state-of-the-art
intermittent pilot ignition system.

Model: WSK300

Features: Auto Battery Backup, Battery Strength
Indicator, Pilot Activation, Fan Speed (Auxilliary
1), two additional Auxilliary Functions, Flame
High/Low, Room Temperature Readout,
Thermostat Mode, Timer Mode, On/Off

IntelliSwitch100 & IntelliSwitch200 Designed
specially for Heatilator, Heat & Glo and
Quadra-Fire fireplaces with IntelliFire, our UL
listed state-of-the-art intermittent pilot
ignition system.

Models: WSK100, WSK200

Features: Auto Battery Backup, Battery Strength
Indicator, Pilot Activation, On/Off, Fan Speed
(WSK200 only)

TotalSwitch Command of both comfort and
ambiance from one location. UL listed for use
with Heatilator, Heat & Glo and Quadra-Fire.

Model: WSK-MLT

Features: Thermostat Mode, Room Temperature
Readout, Auxiliary Function, Flame High/Low, Pilot
Activation, Fan Speed, On/Off

REMOTE CONTROLS

TotalRemote The fullest featured remote control
effortlessly manages heat output and comfort
level. UL listed for use with Heatilator, Heat &
Glo and Quadra-Fire.

Models: RCT-MLT, 841-0980

Features: Hardwired Receiver, Timer Mode,
Thermostat Mode, Room Temperature Readout,
Flame High/Low, Fan Speed, On/Off

SmartRemote For homeowners who want an
added level of function and convenience in a
remote control for fireplaces, stoves, inserts
and gas logs. UL listed for use with Heatilator,
Heat & Glo and Quadra-Fire.

Models: 841-970, 841-0960, SMART-BATT,
SMART-STAT

Features: Battery-Powered or Hardwired
Receiver, Timer Mode, Thermostat Mode, Room
Temperature Readout, On/Off



Programmable Thermostat Control your
hearth system based on your weekly
schedule. UL listed for use with
Quadra-Fire.

Model: 811-0520

Features: 7-Day Programmable,
Thermostat Mode, Room Temperature
Readout, On/Off



Thermostat Simple temperature-based
control of your hearth system. UL listed
for use with Quadra-Fire.

Model: 812-3760

Features: Room Temperature Readout,
On/Off



Easy Switch Controls the most basic
functions of the fireplace—on/off—in
the easiest way possible.

Models: WSK-21, WSK-21-W

Features: On/Off



EasyRemote Controls the on/off function
of the fireplace and read the temperature
of the room (hardwired only) from a
remote control for fireplaces, stoves
inserts and gas logs. UL listed for use with
Heatilator and Heat & Glo.

Models: RC-BATT, RC-SMART

Features: Battery-Powered or Hardwired
Receiver, Room Temperature Readout
(RC-SMART only), On/Off



RC-BATT



RC-SMART

